

Parts Legend

- Firing Pin
- Bolt Head, Stripped Extractor Screw
- Extractor
- Extractor Spring
- Firing Pin Spring Firing Pin Screw
- Cocking Piece
- Bolt Body
- Safety Spring Screw 10
- 11
- Safety Spring Safety Catch Washer 12
- 13
- Locking Bolt Safety Catch 14
- 15 Ejector

- 16 Rear Trigger Guard Screw
 17 Stock Bolt Plate
 18 Magàzine Catch
 19 Bolt Head Retaining Spring
- 20 Magazine Catch Pin
- Retaining Spring Screw 21
- 22 Sear Spring

- 23
- Sear Trigger Pin 24
- Trigger
- 26
- Front Guard Screw
- 27
- Trigger Guard Cut-Off Screw 28
- 29 Cut-Off
- 30 Guard Screw Bushing
- 31 Receiver
- 32 Protector Nut
- 33 Forend Collar
- Rear Sight Protector Screw Rear Sight Protector 34
- 35
- 36 Rear Sight Assembly with Base
- 37 Inner Band
- 38 Inner Band Spring
- Inner Band Screw 39
- 40 Front Sight Blade
- 41
- Front Sight Base Front Sight Pin 42
- 43 Front Nosecap Screw
- 44 Nosecap
- Nosecap Nut 45
- 46 Rear Nosecap Screw

- Stacking Swivel Screw Stacking Swivel Forend Stud 47
- 48
- Forend Stud Spring 50
- 51 Swivel Band
- Front Swivel 52
- 53 Swivel Screw 54
- **Butt Swivel Base** 55
- Swivel Base Screw
- **Buttstock Swivel** 56
- 57 **Butt Swivel Screws**
- 58 Stock Bolt
- 59 Stock Bolt Washer
- 60 **Buttplate Screw**
- 61 Trapdoor Buttplate
- Trapdoor Spring Screw
- Trapdoor Spring 63
- 64 Buttplate
- 65 Buttstock
- 66 Forestock
- 67 Rear Hand Guard
- 68 Front Hand Guard
- 69 Barrel
- 70 Magazine